



Top Jamb Prep

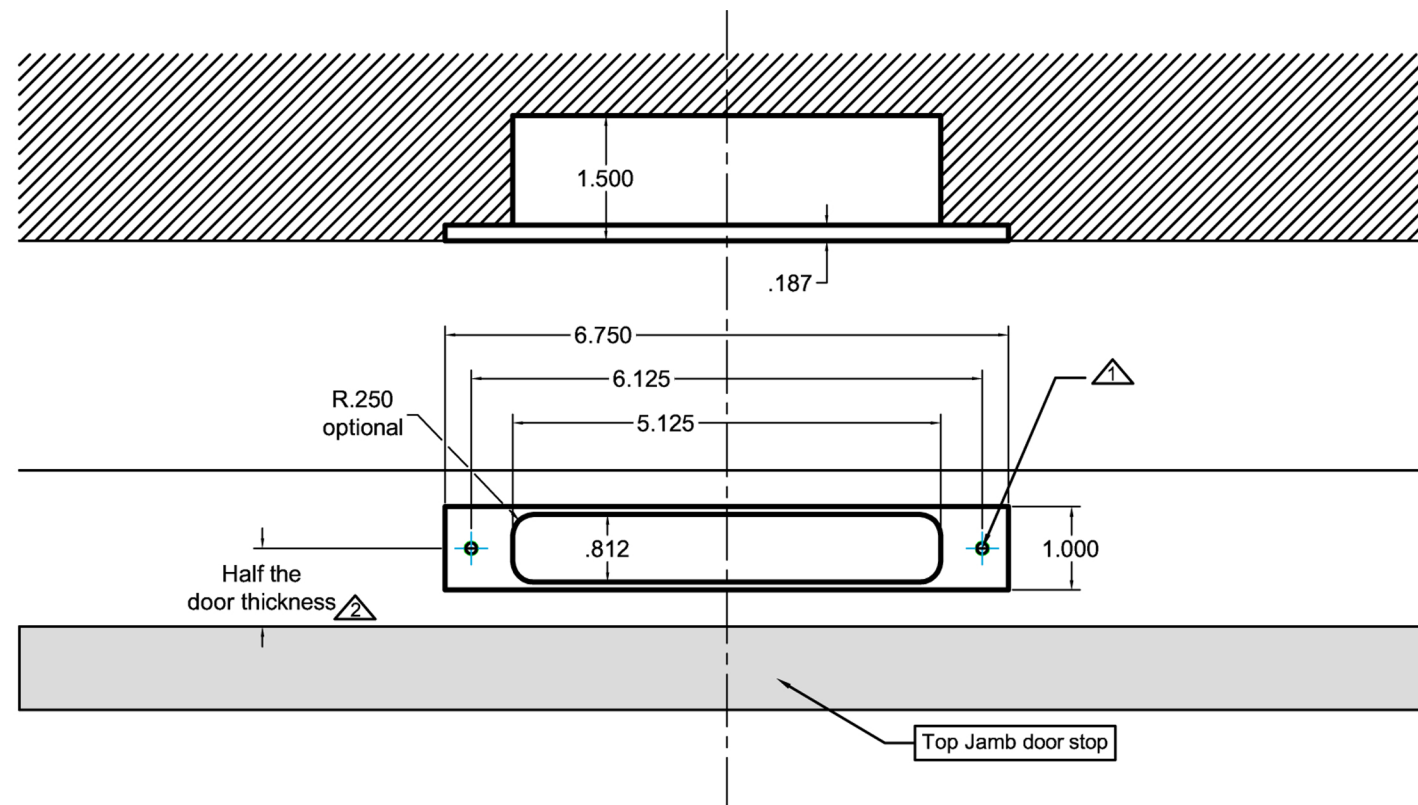

Door Prep

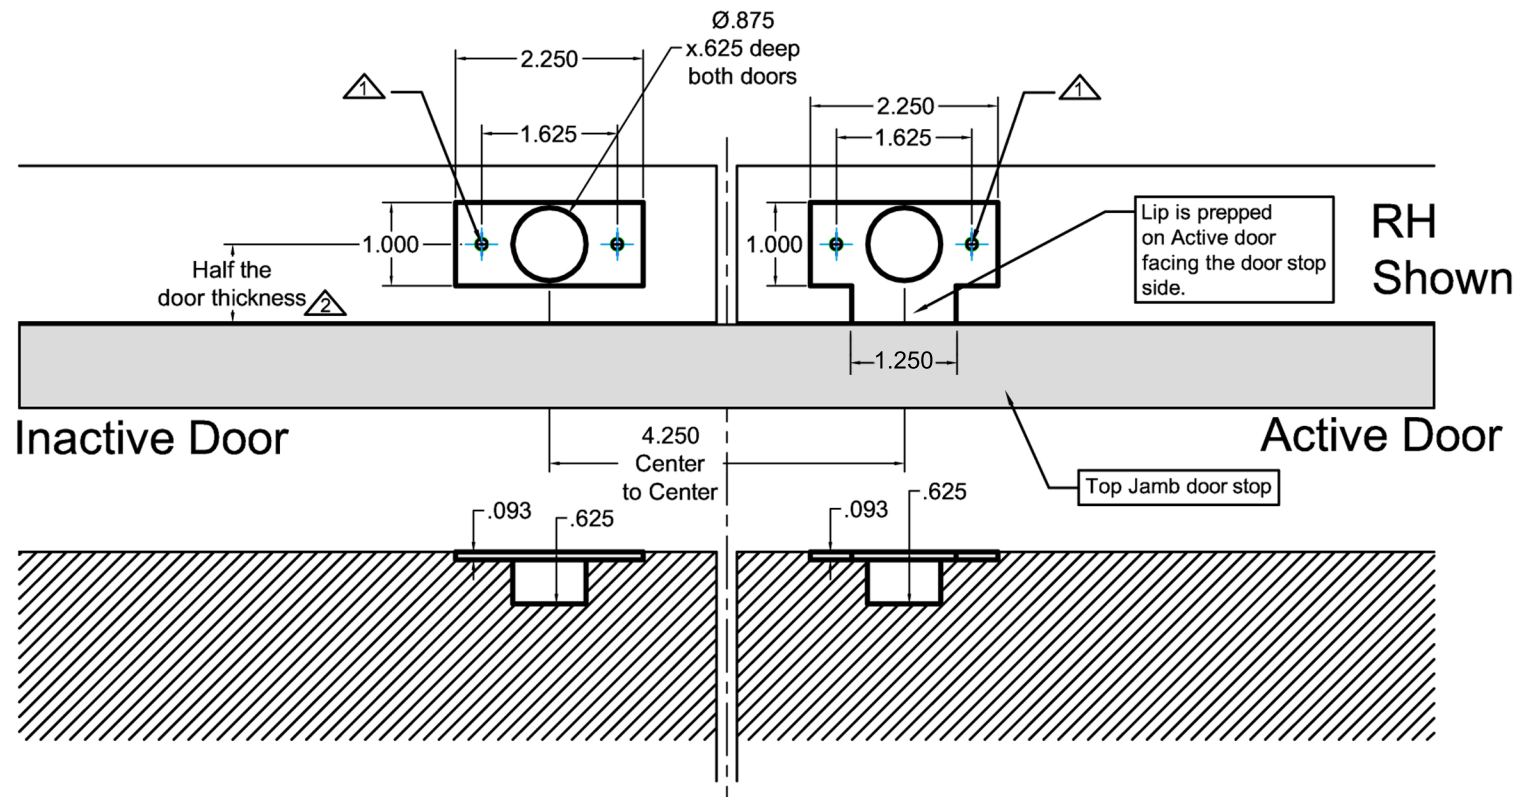

Notes:

- △ Prep for #8 wood or 8-32 machine screws
- △ Adjust for door silencers or weather-strip if needed

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details



Standard 04 Transom Bolt

T-ALH.04