



# INSIDE OF DOOR

# OUTSIDE OF DOOR

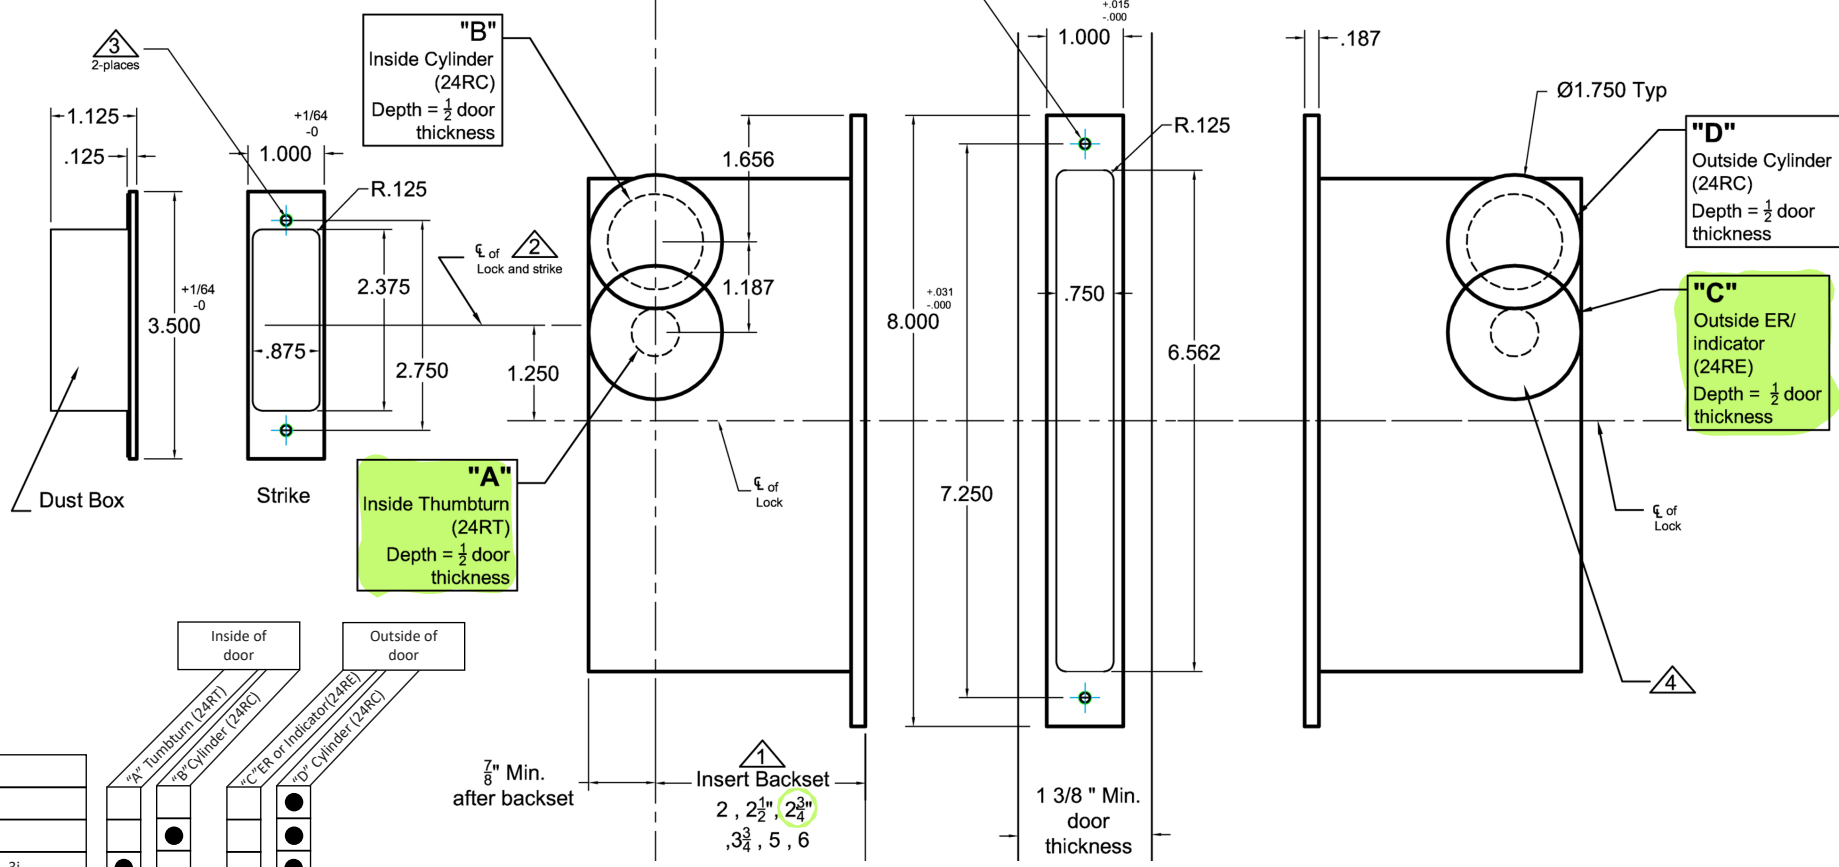

Lock Functions
2002CPDL/2002Q-1
2002CPDL/2002Q-2
2002CPDL/2002Q-3, -3i
2002CPDL/2002Q-4
2002CPDL/2002Q-5, -5i

● Requires Hole

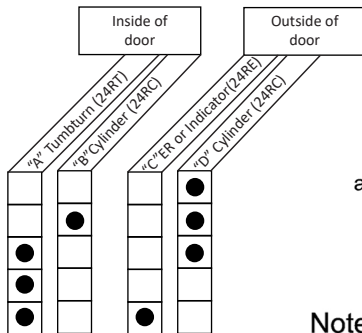

### Notes:

- 1 Insert backset here 2", 2 1/2", 2 3/4", 3 3/4", 5", 6"
- 2 Strike is 1 1/4" above centerline of lock
- 3 Prep for #8 wood or 8-32 machine screws
- 4 After the lock is installed and works properly. Pre-drill screw holes for the flush pulls. Then mount the flush pulls with the provided screws.

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See Spec.2002CPDL/2002Q and Spec.24RT/24RC/24RE for additional details.



**ACCURATE**  
 LOCK & HARDWARE  
 AMERICAN CRAFTED SINCE 1972

Standard 2002CPDL/2002Q - 24RT, 24RC, 24RE Flush Pull - All Backsets

T-ALH.2002CPDL.2002Q.24R