


# INSIDE OF DOOR

# OUTSIDE OF DOOR

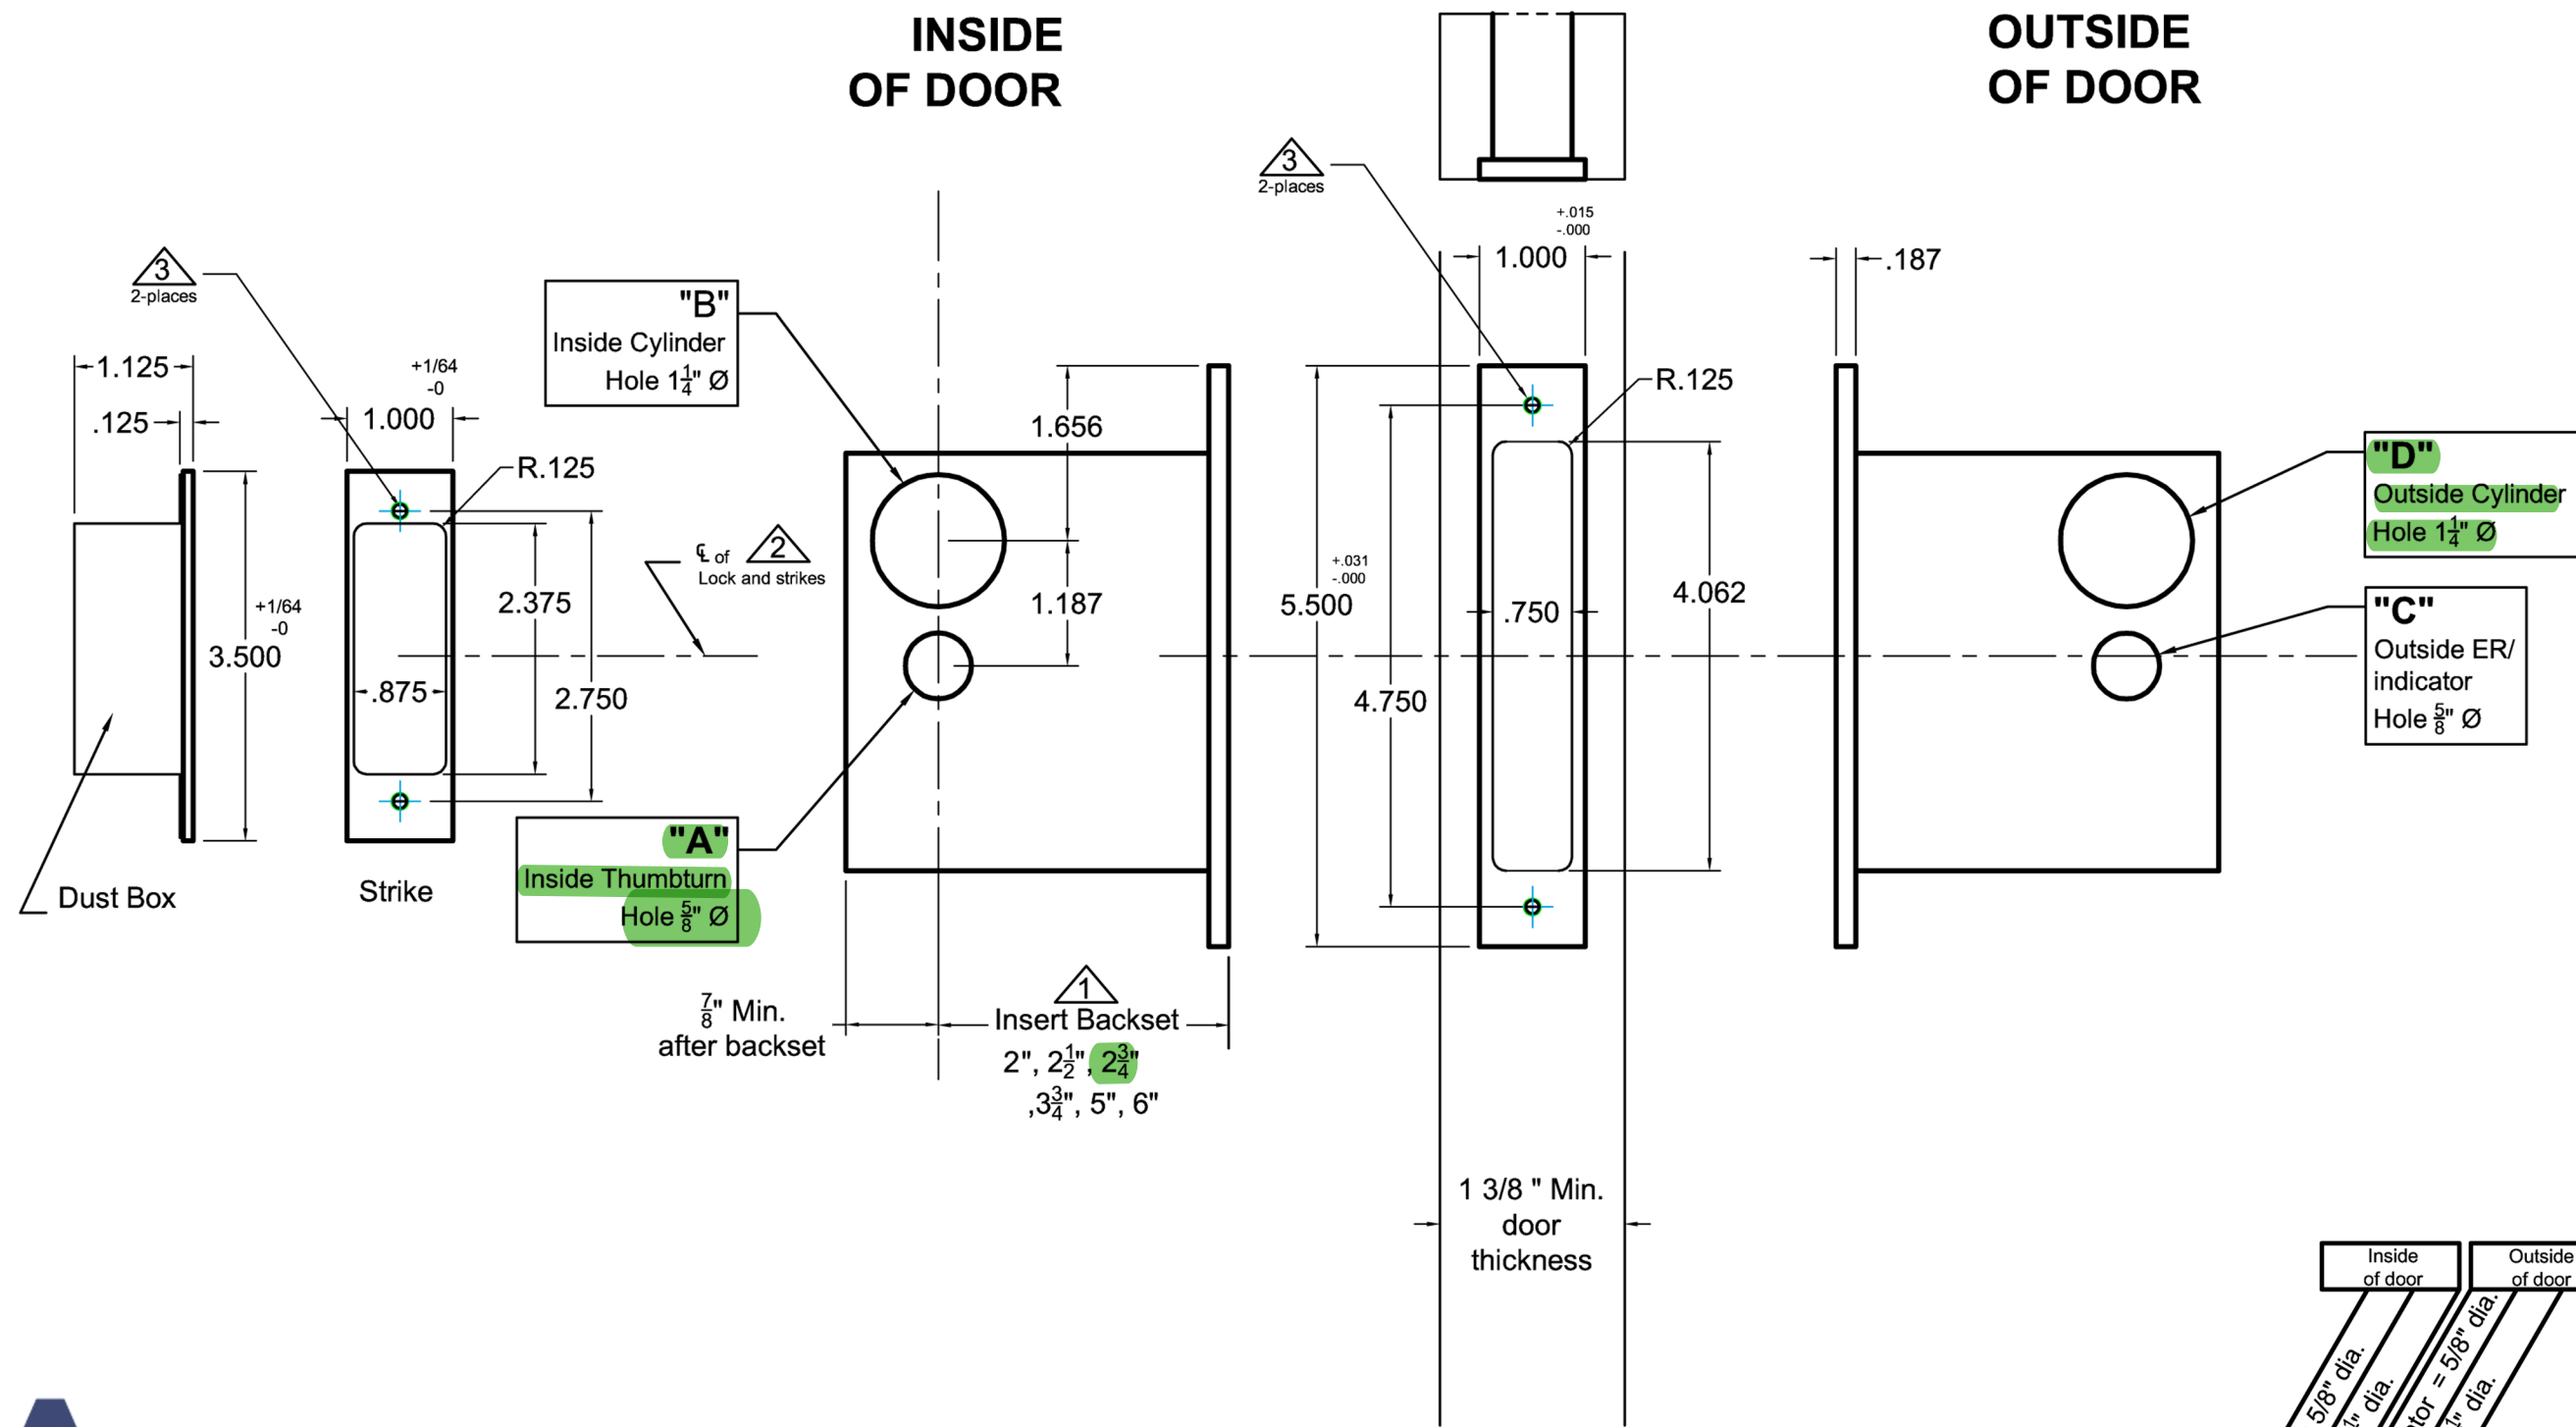

### Notes:

- ① Insert backset here 2", 2 1/2", 2 3/4", 3 3/4", 5", 6"
- ② Centerline of strike and front are the same.
- ③ Prep for #8 wood or 8-32 machine screws .

### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

Lock Functions	Inside of door	Outside of door
9501		
9502	●	●
9503	●	●
9504	●	
9505	●	●
● Required Holes		

"A" thumbturn = 5/8" dia.  
 "B" cylinder = 1 1/4" dia.  
 "C" ER or indicator = 5/8" dia.  
 "D" cylinder = 1 1/4" dia.



Standard 9500 Deadlock - LOCK ONLY - All Backsets

T-ALH.9500.DL