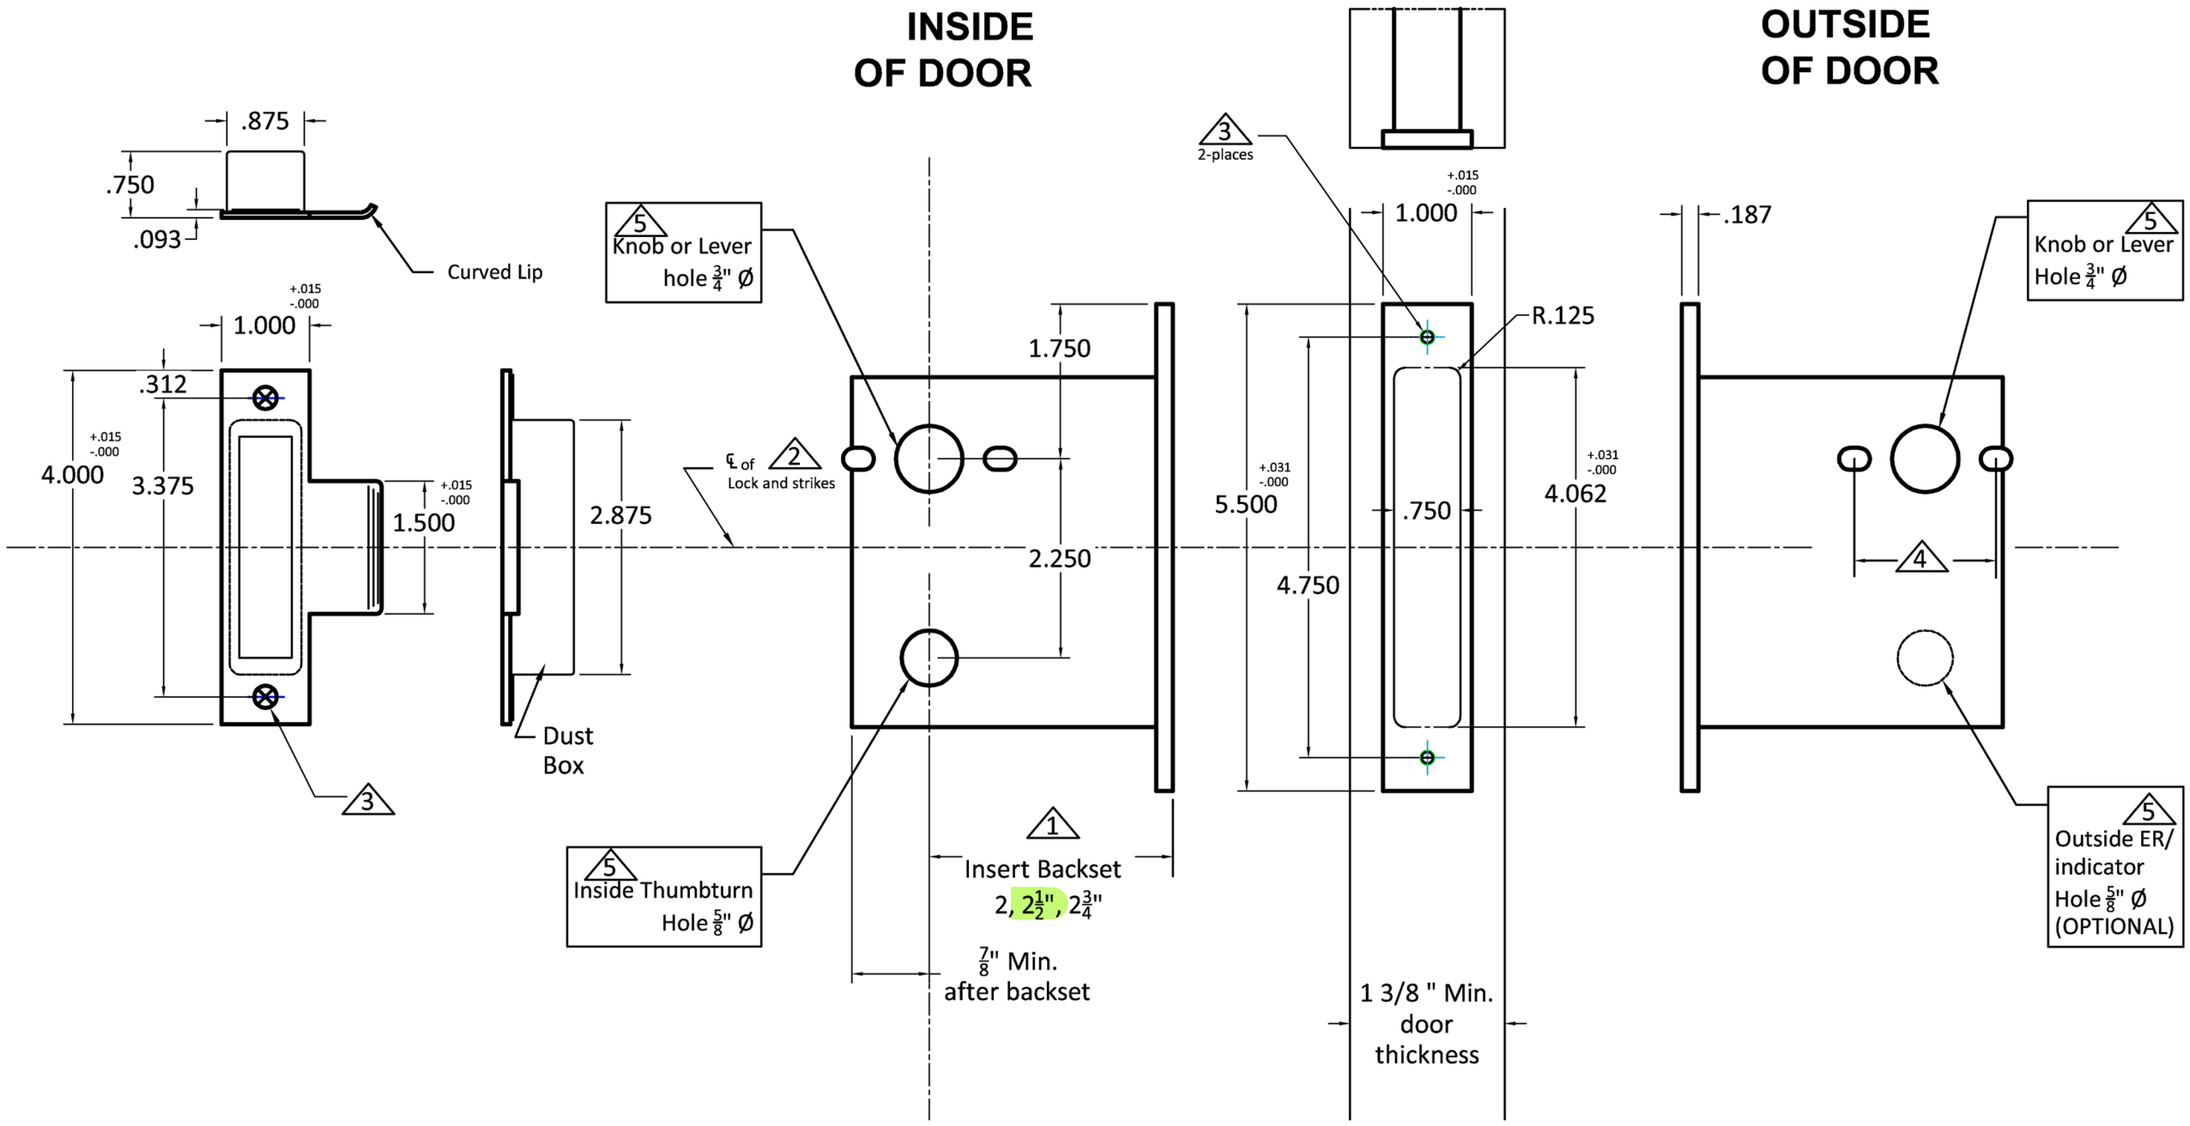

ACCURATE
LOCK & HARDWARE
AMERICAN CRAFTED SINCE 1972

Notes:

1. Insert backset here 2, $2\frac{1}{2}$" or $2\frac{3}{4}$"
2. Centerline of strike and front are the same.
3. Prep for #8 wood or 8-32 machine screws.
4. Through-bolting holes **ONLY** if required. See trim manufacturers standard template for details
   Accurate lock's accommodates $1\frac{1}{2}$" to $1\frac{11}{16}$" center to centers and up to $\frac{1}{4}$" dia. post.
   IMPORTANT: Through-bolting holes only apply to 2 ½" and 2 ¾" backset locks
   (there is no through-bolting on the 2" backset version)
5. Knob, thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility**: Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) See catalog / spec sheets for additional lock details

Standard 9539 Privacy Lock-
All Backsets

T-ALH.9539

P: 203.348.8865 W: accuratelockandhardware.com